Quick Start Guide Bluetooth Headset | 蓝牙耳机




BH71 Package List BH71 开箱清单



- 1 BHM711 Headset | BHM711 耳机
- 2 Quick Start Guide | 快速入门指南
- 3 USB 2.0 Cable (Type-C to Type-A) USB 2.0 线 (Type-C 转 Type-A)
- 4 Eartips | 耳塞 (S, M, L) (M is pre-installed | M 号已预装)
- 5 BHC71 Carrying Case | BHC71 便携盒

BH71 Pro Package List BH71 Pro 开箱清单

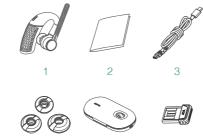

- 1 BHM711 Headset | BHM711 耳机
- 2 Quick Start Guide | 快速入门指南
- 3 USB 2.0 Cable (Type-C to Type-A) USB 2.0 线 (Type-C 转 Type-A)
- 4 Eartips | 耳塞 (S, M, L) (M is pre-installed | M 号已预装)
- 5 BHC71P Charging Case | BHC71P 充电盒
- 6 BT51A Dongle BT51A 蓝牙适配器


Note: Some third-party accessories may be incompatible with the headset, so we strongly recommend that you use the Yealink accessories only.

注意: 部分第三方配件可能与耳机不兼容, 建议仅使用亿联自带的配件。

电量 XX%"

Charge Headset | 耳机充电

It takes approximately 90 minutes to fully charge the headset. 耳机充满电大约需要 90 分钟。

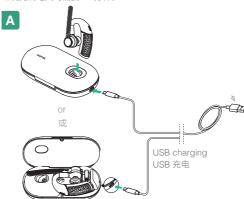



Charging Indicator - 充电指示灯

Carrying Case | 便携盒



Charging: Solid green 充电中:绿灯常亮

Charging is complete: Off 充电完成: 灯灭

Charging Case | 充电盒



Charging: Flash green 充电中: 绿色闪烁

Charging is complete: Off 充电完成: 灯灭

Note: The carrying case of BH71 cannot directly charge the headset and requires an external USB cable.


注意: BH71 的便携盒不具备充电功能,需要外接 USB 线。


Safety Guide - 安全须知

- 1. Do not disassemble the product by yourself or bring it near fire and water to avoid short circuit leakage or damage to the product.
- 2. Do not use the product in high temperature, humidity, and corrosive environment to avoid damaging the circuit and causing failure to charge or other failures.
- 3. Do not expose the product to corrosive liquids. Otherwise, it will cause severe damage.
- 4. Do not disassemble or re-equip the product for any reason to avoid secondary failure and burnout.
- 5. Do not place the product in an environment below -10°C or above 60°C.
- 6. Do not knock, throw or shake the product because rough methods will damage the internal circuit board structure.
- If your headset needs warranty service, the process is quick and easy. Please go to https://ticket.yealink.com/ page/headset/warranty-service.html and submit RMA Claim to Yealink
- 1. 请勿将本产品自行拆卸或投入火中、水中,避免造成短路 漏电或损坏产品。
- 2. 请勿在高温、潮湿或腐蚀性环境下使用本产品,避免损坏 电路导致不能充电或其它故障。
- 3. 请勿将产品接触腐蚀性液体,否则会造成严重损坏。
- 4. 请勿以任何理由拆卸或改装本产品,避免造成二级故障及
- 5. 请勿将产品置于小于 -10℃或者大于 60℃的环境中。
- 6. 请勿敲打、扔掷或强烈震动本产品,粗暴方式会损坏内部

如果您需要进行 RMA 替换货服务,您可以到 https://ticket. yealink.com/page/headset/warranty-service.html 提交硬件 问题,我们的技术支持团队会尽快为您受理。

Power on/off | 开关机

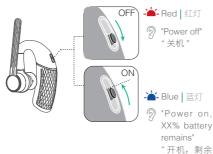

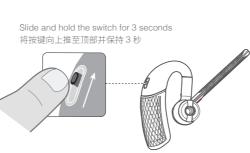













The BT51A of BH71 Pro is pre-paired to the headset and ready for use. One headset can only connect to two devices at a time.

The BT51A can only connect to one headset at a time.

注意:

BH71 Pro 的 BT51A 跟耳机已预配对,即插即用。

- 一个耳机同时只能连接两个设备。
- 一个 BT51A 一次只能连接一个耳机。

Fit the Headset | 佩戴

Right ear wearing | 右耳佩戴

1 Take out the headset, as shown in figure 1 . Twist the speaker to the left, and then rotate microphone boom down.

将耳机取出,如图①所示。向左转动喇叭90°,再向下旋转麦杆。



2 Before wearing, you can adjust the height of the speaker up or down to get the perfect fit for your ear.

在佩戴前,你可以调节伸缩杆高度,让耳机能更好地适应你的耳朵。



3 Put the eartip in your ear and slide headset over and behind your ear, then press gently toward your ear. Fine-tune the headset according to your own situation. 先将耳塞放入耳内,然后将耳机滑到耳后再轻轻按压,以稳定佩戴到耳朵上。 最后再根据个人情况微调。

Note: Remove your eyeglasses before donning the headset for best fit. 注意: 为了更好的适配,佩戴时建议将眼镜先摘下。




Note: Change the eartip for a better fit. Eartips with three size options — S/M/L (medium

注意: 耳机配备了不同尺寸的耳塞, 你可以选择一种合适的尺寸佩戴(耳机上预装了中号)。

Left ear wearing | 左耳佩戴

Take out the headset, as shown in figure 1. Twist the speaker to the right, and then rotate microphone boom down.

 将耳机取出,如图❶所示。向右边转动喇叭90°,再向下旋转麦杆。



For wearing methods, please refer to steps 2 and 3 of the right ear wearing. 佩戴方式请参考右耳佩戴的步骤 2 和步骤 3。

Call Control | 通话控制





Accept 接听



Reject 拒接 (It is not applicable to Teams | Teams 版本不支持)



End 挂断



x 1 In the idle status, invoke the Teams client 空闲状态,调出 Teams 客户端



In the idle status, activate Cortana (requires Microsoft's support) 空闲状态,激活 Teams 的 Cortana (需要微软支持)

Software Management | 软件管理

Yealink USB Connect (电脑端)

Download it from the Yealink website https://www.yealink.com/product/yuc. 从亿联网站 https://www.yealink.com/product/yuc 下载。



Note: It needs to be used with Yealink USB Connect of version 0.35.x.x or later. 注意: 需要配合 Yealink USB Connect 0.35.x.x 或更高版本使用。

Yealink Connect App (移动端)

Download the Yealink Connect App from IOS App Store or Android App Store. 从 IOS 系统 或 Android 系统的应用商店下载 Yealink Connect App。

Yealink Connect







Apple and the Apple logo are trademarks of Apple Inc. Apple 和 Apple 标志是 Apple Inc. 的商标。

Regulatory Notices

- Operating Ambient Temperatures
- Operating temperature: 0 °C to +40 °C (+32 °F to +104°F)
 Relative humidity: 5% to 90%, noncondensing
- Storage temperature:-30°C to +70°C (-22 to +158°F)

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- is the DC voltage symbol.
- WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should

of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)
This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions these instructions. Read these safety instructions before use

- accidental swallowing.

 Please use the accessories provided or authorized by the manufacturer

- Contact the specified maintenance center for repair.
 Do not insert any object into equipment slots that is not part of the
- Do not insert any object not equipment state that the product or auxiliary product.
 Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all Support Frequency Bands and Power:

Battery Requirements • Do not immerse th

- erse the battery into water, which could short-circuit and Contact Information
- Contact information

 Series the battery into water, which could short-circuit and adding the battery of the battery of the battery to expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.

 Do power the handset off before removing the battery,

 Do not try to use the battery for the power supply of any device other than this handset.

 Do not open or mulliate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.

 Use only the rechargeable battery packs delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.

NEED MORE HEIP?



https://ticket.vealink.com



http://support.yealink.com

Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Cleaning Requirements
Before cleaning the device, disconnect if from the power supply.

Use a piece of soft, dry and anti-static cloth to clean the device.

- . Keep the power plug clean and dry.

Troubleshooting

The unit cannot supply power to Yealink device.

- The Unit cannot supply power to realist device.
 There is a bad connection with the plug.

 1. Clean the plug with a dry cloth.
 2. Connect it do another wall outlet.
 The usage environment is out of operating temperature range.
 1. Use in the operating temperature range.
 The cable between the unit and the Yealink device is connected. The Cathe Bennoth and Cathe Bennoth and Cathe Bennoth and Cathe Cathe Cornectly.

 2. You cannot connect the cable properly.

 3. You may have connected a wrong Yealink device the Cathe Bennoth Cathe Bennoth and Cathe Bennoth

- Tour may have connected a wrong realists device.
 Use the correct power supply.
 Some dust, etc., may be in the port.
 Clean the port.
 Contact your dealer or authorized service facility for any further questions.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate

Save these instructions. Read these safety instructions before use!

General Requirements

Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
Puling the process of stiguiding device, persuant to part 15 of the FCC and the safety instructions always keep the device dry and clean, avoid collision and crash always keep the device dry and clean in the device of the properties of the safety instructions and the safety instructions are provided in the provided reasonable protection against harmful interference in a residential installation. This equipment discrepancy, please contact the appointed maintenance center for repair.

Please refer to the relevant laws and statutes while using the device.
Legal rights of others should be respected as well.

Environmental Requirements

Place the device dry and free of dust.
Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.

Keep the device away from any heat source or bare fire, such as candle or an electric heater.
Do not let a child play with the device or any accessory in case of accidental swallowing.
Do not let a child play with the device or any accessory in case of accidental swallowing.
Do not let a child play with the device or any accessory in case of accidental swallowing.
Please use the accessories provided or authorized by the manufacturer

ISÉD WARNING

Please use the accessories provided or authorized by the manufacturer only.
 This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s), Operation voltage of the device. Please use the provided surge protection power socket only.
 Before plugging or unplugging any cable, make sure that your hands

Before plugging or unplugging any cause, make suits that are completely dry.
 Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet stationment or near a swimming pool.
 During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to a value of the power plug and the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four through the power plug and the Asymmetric Digital acusepter four plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and the Asymmetric Digital acusepter for the power plug and th

Subscriber Line (VASC) wased pair (the rather lequelity carrier) values ignifing strike.

If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.

When there is snoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the device from the power supply, and unplug the

Les communications effectuées au moyen de cetappareil ne sont pas nécessairement protégées des indiscrétions

Bluetooth 2 4GHz<20dBm





Bluetooth Headset





430104002158